

DECnet Phase IV MIB Extensions

Status of this Memo

This memo is an extension to the SNMP MIB. This RFC specifies an IAB standards track protocol for the Internet community, and requests discussion and suggestions for improvements. Please refer to the current edition of the "IAB Official Protocol Standards" for the standardization state and status of this protocol. Distribution of this memo is unlimited.

Table of Contents

| | |
|---------------------------------|----|
| Abstract..... | 1 |
| 1. Introduction..... | 1 |
| 2. Selected Objects..... | 2 |
| 3. Objects..... | 3 |
| 3.1 Format of Definitions..... | 3 |
| 3.2 Textual Conventions..... | 4 |
| 4. Object Definitions..... | 4 |
| 5. Acknowledgements..... | 63 |
| 6. References..... | 63 |
| 7. Security Considerations..... | 64 |
| 8. Author's Address..... | 64 |

Abstract

This memo defines a set of DECnet Phase IV extensions that have been created for the Internet MIB. When used in conjunction with the structure of management information (RFC 1155), the management information base for network management of TCP/IP-based internets (RFC 1213) and the Simple Network Management Protocol (RFC 1157), it will be possible to provide integrated network management of combined TCP/IP and DECnet Phase IV based internets. This document was produced by the DECnet Phase IV MIB working group of the Internet Engineering Task Force (IETF).

1. Introduction

With the adoption of The Simple Network Management Protocol (RFC 1157), the management information base for network management of TCP/IP-based internets (RFC 1213), and the structure of management information (RFC 1155), by the Internet, and a large number of vendor

implementations of these standards in commercially available products, it became possible to provide a higher level of effective network management in TCP/IP-based internets than previously available. With the growth in the use of these standards, network managers desired to use this environment as a base for providing integrated network management of multi-protocol networks.

DECnet Phase IV is one widely used protocol which often coexists in IP-based internets. This memo provides the mechanisms by which IP-based management stations can effectively manage DECnet Phase IV based systems (especially router products) in an integrated fashion through the use of the standard Internet SMI, MIB and Simple Network Management Protocol.

DECnet Phase IV objects have been defined to be used in conjunction with the Internet MIB to allow access and control of these new objects by the Internet community. Additional support for other DECnet-based protocols such as RBMS (remote bridge management software) or other Digital Equipment Corporation Specific Hardware platforms is not included in this document.

2. Selected Objects

The objects included in this memo have been created from the DIGITAL Network Architecture Network Management Functional Specification Version 4.0.0 Dated July 1983. An attempt has been made to provide a reasonable ordering of these variables into groups. These groups are:

- o System Group
- o Network Management Group
- o Session Group
- o End Group
- o Routing Group
- o Circuit Group
- o DDCMP Group
- o DDCMP Multipoint Control Group
- o Ethernet Group
- o Counters Group

- o Adjacency Group
- o Line Group
- o Non Broadcast Line Group
- o Area Group

An effort has also been made to preserve the original syntax of the object wherever possible, for example, a DECnet Phase IV object is Executor State. This was originally coded as a NICE (Network Information and Control Exchange) data type which is a Coded single field object of 1 byte in length. When converted for inclusion into the Internet MIB using the Internet SMI, it became an enumerated integer.

3. Objects

All objects in this memo are described using the standard Internet SMI and BER of RFC 1155. A complete description of an object will include the name, syntax and encoding. Just as with objects supported in the MIB (RFC 1156), an object name is identified with an object identifier which has been administratively assigned. This identifies an Object Type. When an object type is combined with a specific instance, the particular object is uniquely identified. The use of Object Descriptors in this memo is consistent with that of RFC 1156 - they are text strings meant to be read by humans. The descriptors have been taken from the original DIGITAL Network Architecture Network Management Functional Specification Version 4.0.0 Dated July 1983 which defined DECnet Phase IV objects. These names were then massaged to put them in a form as consistent as possible with object type names listed in the standard Internet MIB. Object definition information is also taken directly from the Network Architecture Network Management Functional Specification cited above wherever possible. In this document, EXECUTOR is intended to reference only the DECnet software and is not intended to effect any other protocols which may be running on the system.

3.1 Format of Definitions

An object in this memo is specified by five fields of information: Object, Syntax, Definition, Access, and Status.

The OBJECT is a textual name (OBJECT DESCRIPTOR) for that object type combined with an administratively obtained OBJECT IDENTIFIER.

SYNTAX: For each object type, its abstract syntax is presented using the ASN.1 specified in RFC 1155.

DEFINITION: A general description of the object type. Its original purpose in the DECnet Phase IV environment is given so that all implementers and users will consistently interpret the information contained in each object type. Changes in format to make the object consistent with RFC 1155 are also noted.

ACCESS: The standard access keywords supported in RFC 1156 are used. The keywords used in this MIB are: read-only, read-write, and, not-accessible.

STATUS: The status field is used to describe with a single keyword whether the object type is mandatory or optional. Status keywords of obsolete and deprecated are not used in this memo since this is the first version of the DECnet Phase IV MIB.

3.2 Textual Conventions

New datatypes have been introduced as a textual conventions in this DECnet Phase IV MIB document. The purpose of these additions is to facilitate understanding of new objects in this MIB. No changes to the SMI or the SNMP are necessary to support these conventions which are described in 4.0 (Object Definitions).

4. Object Definitions

```

RFC1289-phivMIB

DEFINITIONS ::= BEGIN

IMPORTS
    Gauge
        FROM RFC1155-SMI
    OBJECT-TYPE
        FROM RFC-1212
    mib-2, DisplayString
        FROM RFC1213-MIB;

-- DECnet Phase-IV MIB

    phiv                OBJECT IDENTIFIER ::= { mib-2 18 }

-- textual conventions

PhivAddr ::= OCTET STRING (SIZE (2))
-- This data type is intended as a short word representation of
-- standard DECnet Phase IV addresses. DECnet addresses are
-- hierarchically structured numbers assigned to a particular
-- DECnet node. The address is structured so that the area

```

```
-- number is contained in the most significant 6 bits of the
-- first octet. The next 2 bits of the first octet contain
-- the first two bits of the host address. The remainder of
-- the host address is contained in the second octet.
```

```
PhivCounter ::= INTEGER
```

```
-- This data type has been created for DECnet counters. These
-- counters latch at their maximum specified value until either
-- the system is restarted, or they are reset to zero by the user
-- or management software.
```

```
-- groups in the decnetiv mib
```

| | |
|------------------|-----------------------------------|
| phivSystem | OBJECT IDENTIFIER ::= { phiv 1 } |
| phivManagement | OBJECT IDENTIFIER ::= { phiv 2 } |
| session | OBJECT IDENTIFIER ::= { phiv 3 } |
| end | OBJECT IDENTIFIER ::= { phiv 4 } |
| routing | OBJECT IDENTIFIER ::= { phiv 5 } |
| circuit | OBJECT IDENTIFIER ::= { phiv 6 } |
| ddcmp | OBJECT IDENTIFIER ::= { phiv 7 } |
| control | OBJECT IDENTIFIER ::= { phiv 8 } |
| ethernet | OBJECT IDENTIFIER ::= { phiv 9 } |
| counters | OBJECT IDENTIFIER ::= { phiv 10 } |
| adjacency | OBJECT IDENTIFIER ::= { phiv 11 } |
| line | OBJECT IDENTIFIER ::= { phiv 12 } |
| nonBroadcastLine | OBJECT IDENTIFIER ::= { phiv 14 } |
| area | OBJECT IDENTIFIER ::= { phiv 15 } |

```
-- System Group
```

```
-- The implementation of the System Group is mandatory for
-- all systems.
```

```
phivSystemState OBJECT-TYPE
```

```
SYNTAX INTEGER {
    on (1),
    off (2),
    shut (3),
    restricted (4)
}
```

```
ACCESS read-write
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"This represents the operational state of the executor
node.
```

```
The possible states are:
```

```
ON           Allows logical links.
```

```
OFF          Allows no new links, terminates existing
```

links, and stops routing traffic through.
 SHUT Allows no new logical links, does not
 destroy existing logical links, and goes
 to the OFF state when all logical links are
 gone.
 RESTRICTED Allows no new incoming logical links from
 other nodes.

NOTE: These values are incremented by one compared to
 the standard DECnet values in order to maintain
 compliance with RFC 1155)."

::= { phivSystem 1 }

phivExecIdent OBJECT-TYPE

SYNTAX DisplayString (SIZE (0..32))

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This is a text string that describes the executor node
 (for example, 'Research Lab'). The string is up to 32
 characters of any type."

::= { phivSystem 2 }

-- Network Management Group

-- The implementation of the Network Management Group is
 -- mandatory for all systems which contain a DECnet style
 -- management version.

phivMgmtMgmtVers OBJECT-TYPE

SYNTAX DisplayString (SIZE (0..255))

ACCESS read-only

STATUS mandatory

DESCRIPTION

"This is the read-only Network Management Version,
 consisting of the version number, the Engineering
 Change Order (ECO) number, and the user ECO number
 (for example, 3.0.0). This parameter applies to the
 executor node only."

::= { phivManagement 1 }

-- Session Layer Group

-- The implementation of the Session Layer Group is mandatory for
 -- all systems that implement session layer communications.

```
phivSessionSystemName OBJECT-TYPE
    SYNTAX DisplayString ( SIZE (0..6) )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Name to be associated with the node identification.
        Only one name can be assigned to a node address or a
        circuit identification. No name should be used more than
        once in a DECnet network. Node-name is one to six upper
        case alphanumeric characters with at least one alpha
        character. A length of 0 indicates no name."
    ::= { session 1 }

phivSessionInTimer OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum duration between the
        time a connect is received for a process at the
        executor node and the time that process accepts or
        rejects it. If the connect is not accepted or rejected
        by the user within the number of seconds specified,
        Session Control rejects it for the user. A 0
        indicates no timer is running."
    ::= { session 2 }

phivSessionOutTimer OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the duration between the time the
        executor requests a connect and the time that connect is
        acknowledged by the destination node. If the connect is
        not acknowledged within the number of seconds
        specified, Session Control returns an error. A 0
        indicates no timer is running."
    ::= { session 3 }

-- End Communication Layer Group

-- The implementation of the End Communication Layer Group is
-- mandatory for all systems that implement end layer
-- communications.

-- Remote State Table
```

```
phivEndRemoteTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivEndRemoteEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about the state of sessions between the
        node under study and the nodes found in the table."
    ::= { end 1 }

phivEndRemoteEntry OBJECT-TYPE
    SYNTAX PhivEndRemoteEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about a particular remote node as seen
        from the end communication layer."
    INDEX { phivEndRemoteHostNodeID }
    ::= { phivEndRemoteTable 1 }

PhivEndRemoteEntry ::=
    SEQUENCE {
        phivEndRemoteHostNodeID
            PhivAddr,
        phivEndRemoteState
            INTEGER,
        phivEndCircuitIndex
            INTEGER,
        phivEndActiveLinks
            INTEGER,
        phivEndDelay
            INTEGER (0..65535)
    }

phivEndRemoteHostNodeID OBJECT-TYPE
    SYNTAX PhivAddr -- OCTET STRING (SIZE (2))
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value is the address of the remote node to be
        evaluated."
    ::= { phivEndRemoteEntry 1 }

phivEndRemoteState OBJECT-TYPE
    SYNTAX INTEGER {
        on (1),
        off (2),
        shut (3),
        restricted (4)
    }
```

```

}
ACCESS read-write
STATUS mandatory
DESCRIPTION
    "This represents the operational state of the remote node
    being evaluated.
    The possible states are:

    ON           Allows logical links.
    OFF          Allows no new links, terminates existing
                links, and stops routing traffic through.
    SHUT         Allows no new logical links, does not
                destroy existing logical links, and goes
                to the OFF state when all logical links are
                gone.
    RESTRICTED  Allows no new incoming logical links from
                other nodes.

    NOTE: These values are incremented by one compared to
    the standard DECnet values in order to maintain
    compliance with RFC 1155."
 ::= { phivEndRemoteEntry 2 }

phivEndCircuitIndex OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A unique index value for each known circuit used to
        communicate with the remote node. This is the same
        value as phivCircuitIndex."
 ::= { phivEndRemoteEntry 3 }

phivEndActiveLinks OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This read-only parameter represents the number of active
        logical links from the executor to the destination node."
 ::= { phivEndRemoteEntry 4 }

phivEndDelay OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This read-only parameter is the average round trip

```

```

        delay in seconds to the destination node. This
        parameter is kept on a remote node basis."
 ::= { phivEndRemoteEntry 5 }

```

```
-- End System Counter Table
```

```

phivEndCountTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivEndCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about the counters associated with each end
        system that is known to the entity. These counters
        reflect totals from the perspective of the executor
        node."
 ::= { end 2 }

```

```

phivEndCountEntry OBJECT-TYPE
    SYNTAX PhivEndCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about a particular session between two end
        systems."
    INDEX { phivEndCountHostNodeID }
 ::= { phivEndCountTable 1 }

```

```

PhivEndCountEntry ::=
    SEQUENCE {
        phivEndCountHostNodeID
            PhivAddr,
        phivEndCountSecsLastZeroed
            PhivCounter (0..65535),
        phivEndCountUsrBytesRec
            PhivCounter,
        phivEndCountUsrBytesSent
            PhivCounter,
        phivEndUCountUsrMessRec
            PhivCounter,
        phivEndCountUsrMessSent
            PhivCounter,
        phivEndCountTotalBytesRec
            PhivCounter,
        phivEndCountTotalBytesSent
            PhivCounter,
        phivEndCountTotalMessRec
            PhivCounter,
        phivEndCountTotalMessSent

```

```

        PhivCounter,
    phivEndCountConnectsRecd
        PhivCounter (0..65535),
    phivEndCountConnectsSent
        PhivCounter (0..65535),
    phivEndCountReponseTimeouts
        PhivCounter (0..65535),
    phivEndCountRecdConnectResErrs
        PhivCounter (0..65535)
    }
phivEndCountHostNodeID OBJECT-TYPE
    SYNTAX PhivAddr -- OCTET STRING (SIZE (2))
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value is the address of the remote node to be
        evaluated."
    ::= { phivEndCountEntry 1 }

phivEndCountSecsLastZeroed OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value is the number of seconds that have elapsed
        since the counters for the node in this table row were
        last set to zero. This counter is located in the
        network management layer, but is returned with the
        end system information which follows."
    ::= { phivEndCountEntry 2 }

phivEndCountUsrBytesRec OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of user bytes received from the target host."
    ::= { phivEndCountEntry 3 }

phivEndCountUsrBytesSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of user bytes sent to the target host."
    ::= { phivEndCountEntry 4 }

```

```
phivEndUCountUsrMessRec OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of user messages received from the target host."
    ::= { phivEndCountEntry 5 }

phivEndCountUsrMessSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of user messages sent to the target host."
    ::= { phivEndCountEntry 6 }

phivEndCountTotalBytesRec OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of bytes received from the target host."
    ::= { phivEndCountEntry 7 }

phivEndCountTotalBytesSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of bytes sent to the target host."
    ::= { phivEndCountEntry 8 }

phivEndCountTotalMessRec OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of messages received from the target host."
    ::= { phivEndCountEntry 9 }

phivEndCountTotalMessSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of messages sent to the target host."
    ::= { phivEndCountEntry 10 }
```

```
phivEndCountConnectsRecd OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of connects received from the target host."
    ::= { phivEndCountEntry 11 }

phivEndCountConnectsSent OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of connects sent to the target host."
    ::= { phivEndCountEntry 12 }

phivEndCountReponseTimeouts OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of response timeouts."
    ::= { phivEndCountEntry 13 }

phivEndCountRecdConnectResErrs OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of received connect resource errors."
    ::= { phivEndCountEntry 14 }

-- additional End System objects

phivEndMaxLinks OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum active logical
        link count allowed for the executor."
    ::= { end 3 }

phivEndNSPVers OBJECT-TYPE
    SYNTAX DisplayString (SIZE (0..255) )
    ACCESS read-only
    STATUS mandatory
```

DESCRIPTION

"This read-only parameter represents the version number of the node End Communication S/W. The format is version number, ECO, and user ECO, e.g., 4.1.0"

::= { end 4 }

phivEndRetransmitFactor OBJECT-TYPE

SYNTAX INTEGER (1..65535)

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This value represents the maximum number of times the source End Communication at the executor node will restart the retransmission timer when it expires. If the number is exceeded, Session Control disconnects the logical link for the user."

::= { end 5 }

phivEndDelayFact OBJECT-TYPE

SYNTAX INTEGER (1..255)

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This is the number by which to multiply one sixteenth of the estimated round trip delay to a node to set the retransmission timer to that node."

::= { end 6 }

phivEndDelayWeight OBJECT-TYPE

SYNTAX INTEGER (1..255)

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This number represents the weight to apply to a current round trip delay estimate to a remote node when updating the estimated round trip delay to a node. On some systems the number must be 1 less than a power of 2 for computational efficiency."

::= { end 7 }

phivEndInactivityTimer OBJECT-TYPE

SYNTAX INTEGER (1..65535)

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This value represents the maximum duration of inactivity (no data in either direction) on a logical link before the node checks to see if the logical link still works."

```
        If no activity occurs within the minimum number of
        seconds, End Communication generates artificial
        traffic to test the link (End Communication
        specification).
 ::= { end 8 }

phivEndCountZeroCount OBJECT-TYPE
    SYNTAX INTEGER {
        other (1),
        reset (2)
    }
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "When this value is set to 2, all of the counters in
        the End System Counter Table are set to zero."
 ::= { end 9 }

phivEndMaxLinksActive OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the high water mark for the
        number of links that were active at any one time."
 ::= { end 10 }

-- Routing Layer Group

-- The implementation of the Routing Layer Group is mandatory for
-- all systems that implement level 1 routing layer
-- communications.

phivRouteBroadcastRouteTimer OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value determines the maximum time in seconds
        allowed between Routing updates on Ethernet
        circuits. When this timer expired before a routing
        update occurs, a routing update is forced. With a
        standard calculation, Routing also uses this timer
        to enforce a minimum delay between routing updates."
 ::= { routing 1 }

phivRouteBuffSize OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
```

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This parameter value determines the maximum size of a Routing message. It therefore determines the maximum size message that can be forwarded. This size includes protocol overhead down to and including the End Communication layer, plus a constant value of 6. (This value of 6 is included to provide compatibility with the parameter definition in Phase III, which included the Routing overhead.) It does not include Routing or Data link overhead (except for the constant value of 6). There is one buffer size for all circuits.

NOTE: The BUFFER SIZE defines the maximum size messages that the Routing layer can forward. The SEGMENT BUFFER SIZE (defined below) defines the maximum size messages that the End Communication layer can transmit or receive. The SEGMENT BUFFER SIZE is always less than or equal to the BUFFER SIZE. Normally the two parameters will be equal. They may be different to allow the network manager to alter buffer sizes on all nodes without interruption of service. They both include an extra 6 bytes for compatibility with Phase III."

::= { routing 2 }

phivRouteRoutingVers OBJECT-TYPE

SYNTAX DisplayString (SIZE (0..255))

ACCESS read-only

STATUS mandatory

DESCRIPTION

"This read-only parameter identifies the executor node's Routing version number. The format is version number, ECO, and user ECO, e.g., 4.1.0"

::= { routing 3 }

phivRouteMaxAddr OBJECT-TYPE

SYNTAX INTEGER (1..1023)

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This value represents the largest node number and, therefore, number of nodes that can be known about by the executor node's home area."

::= { routing 4 }

```
phivRouteMaxBdcastNonRouters OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum total number of
        nonrouters the executor node can have on its Ethernet
        circuits."
    ::= { routing 5 }

phivRouteMaxBdcastRouters OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum total number of
        routers the executor node can have on its Ethernet
        circuits."
    ::= { routing 6 }

phivRouteMaxBufs OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum number of transmit
        buffers that Routing may use for all circuits."
    ::= { routing 7 }

phivRouteMaxCircuits OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum number of Routing
        circuits that the executor node can know about."
    ::= { routing 8 }

phivRouteMaxCost OBJECT-TYPE
    SYNTAX INTEGER (1..1022)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum total path cost
        allowed from the executor to any node within an area.
        The path cost is the sum of the circuit costs along
        a path between two nodes. This parameter defines the
        point where the executor node's Routing routing
```

decision algorithm declares another node unreachable because the cost of the least costly path to the other node is excessive. For correct operation, this parameter must not be less than the maximum path cost of the network."

::= { routing 9 }

phivRouteMaxHops OBJECT-TYPE

SYNTAX INTEGER (1..30)

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This value represents the maximum number of routing hops allowable from the executor to any other reachable node within an area. (A hop is the logical distance over a circuit between two adjacent nodes.) This parameter defines the point where the executor node's Routing routing decision algorithm declares another node unreachable because the length of the shortest path between the two nodes is too long. For correct operation, this parameter must not be less than the network diameter. (The network diameter is the reachability distance between the two nodes of the network having the greatest reachability distance, where reachability distance is the length the shortest path between a given pair of nodes.)"

::= { routing 10 }

phivRouteMaxVisits OBJECT-TYPE

SYNTAX INTEGER (1..63)

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This value represents the maximum number of nodes a message coming into the executor node can have visited. If the message is not for this node and the MAXIMUM VISITS number is exceeded, the message is discarded. The MAXIMUM VISITS parameter defines the point where the packet lifetime control algorithm discards a packet that has traversed too many nodes. For correct operation, this parameter must not be less than the maximum path length of the network. (The maximum path length is the routing distance between the two nodes of the network having the greatest routing distance, where routing distance is the length of the least costly path between a given pair of nodes.)"

::= { routing 11 }

```

phivRouteRoutingTimer OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value determines the maximum time in seconds
        allowed between Routing updates on non-Ethernet
        circuits. When this timer expires before a routing
        update occurs, a routing update is forced."
    ::= { routing 12 }

phivRouteSegBuffSize OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This parameter value determines the maximum size of an
        end-to-end segment. The size is a decimal integer in
        the range 1-65535. This size is in bytes. This size
        includes protocol overhead down to and including the
        End Communication layer, plus a constant value of 6.
        (This value of 6 is included to provide compatibility
        with the BUFFER SIZE parameter definition.) It does not
        include Routing or Data link overhead (except for the
        constant value of 6)."
    ::= { routing 13 }

phivRouteType OBJECT-TYPE
    SYNTAX INTEGER {
        routing-III (1),
        nonrouting-III (2),
        area (3),
        routing-IV (4),
        nonrouting-IV (5)
    }
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This parameter indicates the type of the executor
        node. The node-type is one of the following:

        routing-III
        nonrouting-III
        routing-IV
        nonrouting-IV
        area

        A routing node has full routing capability. A

```

nonrouting node contains a subset of the Routing routing modules. The III and IV indicate the DNA phase of the node. Nonrouting nodes can deliver and receive packets to and from any node, but cannot route packets from other nodes through to other nodes. An area node routes between areas. Refer to the Routing specification for details.

For adjacent nodes, this is a read-only parameter that indicates the type of the reachable adjacent node.
NOTE: The ROUTING-III and NONROUTING-III values are incremented by one compared to the standard DECnet values in order to maintain compliance with RFC 1155)"

```
::= { routing 14 }
```

```
phivRouteCountAgedPktLoss OBJECT-TYPE
```

```
SYNTAX PhivCounter (0..127)
```

```
ACCESS read-only
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"Number of aged packet losses."
```

```
::= { routing 15 }
```

```
phivRouteCountNodeUnrPktLoss OBJECT-TYPE
```

```
SYNTAX PhivCounter (0..65535)
```

```
ACCESS read-only
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"Number of node unreachable packet losses."
```

```
::= { routing 16 }
```

```
phivRouteCountOutRngePktLoss OBJECT-TYPE
```

```
SYNTAX PhivCounter (0..127)
```

```
ACCESS read-only
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"Number of node out-of-range packet losses."
```

```
::= { routing 17 }
```

```
phivRouteCountOverSzePktLoss OBJECT-TYPE
```

```
SYNTAX PhivCounter (0..127)
```

```
ACCESS read-only
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"Number of Oversized packet losses."
```

```
::= { routing 18 }
```

```

phivRouteCountPacketFmtErr OBJECT-TYPE
    SYNTAX PhivCounter (0..127)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of packet format errors."
    ::= { routing 19 }

phivRouteCountPtlRteUpdtLoss OBJECT-TYPE
    SYNTAX PhivCounter (0..127)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of partial routing update losses."
    ::= { routing 20 }

phivRouteCountVerifReject OBJECT-TYPE
    SYNTAX PhivCounter (0..127)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of verification rejects."
    ::= { routing 21 }

-- Level 1 Routing Table

phivLevel1RouteTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivLevel1RouteEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about the currently known DECnet Phase
         IV Routes."
    ::= { routing 22 }

phivLevel1RouteEntry OBJECT-TYPE
    SYNTAX PhivLevel1RouteEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about the currently known DECnet Phase
         IV Routes."
    INDEX { phivLevel1RouteNodeAddr }
    ::= { phivLevel1RouteTable 1 }

PhivLevel1RouteEntry ::=
    SEQUENCE {
        phivLevel1RouteNodeAddr

```

```

        PhivAddr,
    phivLevellRouteCircuitIndex
        INTEGER,
    phivLevellRouteCost
        INTEGER (0..65535),
    phivLevellRouteHops
        INTEGER (0..127),
    phivLevellRouteNextNode
        PhivAddr
    }
phivLevellRouteNodeAddr OBJECT-TYPE
    SYNTAX PhivAddr -- OCTET STRING (SIZE (2))
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value is the address of the node about which
        routing information is contained in this level 1
        routing table."
    ::= { phivLevellRouteEntry 1 }

phivLevellRouteCircuitIndex OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A unique index value for each known circuit. This is
        the index to the circuit state table and is the same
        value as phivCircuitIndex."
    ::= { phivLevellRouteEntry 2 }

phivLevellRouteCost OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This read-only parameter represents the total cost
        over the current path to the destination node. Cost is
        a positive integer value associated with using a
        circuit. Routing routes messages (data) along the path
        between two nodes with the smallest cost. COST is kept
        on a remote node basis."
    ::= { phivLevellRouteEntry 3 }

phivLevellRouteHops OBJECT-TYPE
    SYNTAX INTEGER (0..127)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION

```

```

        "This read-only parameter represents the number of hops
        over to a destination node. A hop is Routing value
        representing the logical distance between two nodes in
        a network. HOPS is kept on a remote node basis."
 ::= { phivLevellRouteEntry 4 }

phivLevellRouteNextNode OBJECT-TYPE
    SYNTAX PhivAddr -- OCTET STRING (SIZE (2))
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This read-only value indicates the next node on the
        circuit used to get to the node under scrutiny
        (next hop)."
 ::= { phivLevellRouteEntry 5 }

-- Additional routing parameters

phivRouteCountZeroCount OBJECT-TYPE
    SYNTAX INTEGER {
        other (1),
        reset (2)
    }
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "When this value is set to 2, the following objects are
        set to Zero: phivRouteCountAgedPktLoss,
        phivRouteCountNodeUnrPktLoss,
        phivRouteCountOutRngePktLoss,
        phivRouteCountOverSzePktLoss,
        phivRouteCountPacketFmtErr,
        phivRouteCountPtlRteUpdtLoss, and
        phivRouteCountVerifReject."
 ::= { routing 23 }

phivRouteSystemAddr OBJECT-TYPE
    SYNTAX PhivAddr
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "DECnet Phase IV node address."
 ::= { routing 24 }

```

```
-- Circuit Group

-- The implementation of the Circuit Group is mandatory for
-- all systems.

-- Circuit Parameters Table

phivCircuitParametersTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivCircuitParametersEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about the parameters associated with all
        circuits currently known."
    ::= { circuit 1 }

phivCircuitParametersEntry OBJECT-TYPE
    SYNTAX PhivCircuitParametersEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Parameters information about all circuits currently
        known."
    INDEX { phivCircuitIndex }
    ::= { phivCircuitParametersTable 1 }

PhivCircuitParametersEntry ::=
    SEQUENCE {
        phivCircuitIndex
            INTEGER,
        phivCircuitLineIndex
            INTEGER,
        phivCircuitCommonState
            INTEGER,
        phivCircuitCommonSubState
            INTEGER,
        phivCircuitCommonName
            DisplayString,
        phivCircuitExecRecallTimer
            INTEGER (0..65535),
        phivCircuitCommonType
            INTEGER,
        phivCircuitService
            INTEGER,
        phivCircuitExecCost
            INTEGER (1..25),
        phivCircuitExecHelloTimer
```

```
        INTEGER (1..8191)
    }
    phivCircuitIndex OBJECT-TYPE
        SYNTAX INTEGER
        ACCESS read-only
        STATUS mandatory
        DESCRIPTION
            "A unique index value for each known circuit."
        ::= { phivCircuitParametersEntry 1 }

    phivCircuitLineIndex OBJECT-TYPE
        SYNTAX INTEGER
        ACCESS read-only
        STATUS mandatory
        DESCRIPTION
            "The line on which this circuit is active. This is
            the same as the IfIndex."
        ::= { phivCircuitParametersEntry 2 }

    phivCircuitCommonState OBJECT-TYPE
        SYNTAX INTEGER {
            on (1),
            off (2),
            service (3),
            cleared (4)
        }
        ACCESS read-write
        STATUS mandatory
        DESCRIPTION
            "This value represents the circuit's Network Management
            operational state. NOTE: These values are incremented
            by one compared to the standard DECnet values in order
            to maintain compliance with RFC 1155."
        ::= { phivCircuitParametersEntry 3 }

    phivCircuitCommonSubState OBJECT-TYPE
        SYNTAX INTEGER {
            starting (1),
            reflecting (2),
            looping (3),
            loading (4),
            dumping (5),
            triggering (6),
            autoservice (7),
            autoloading (8),
            autodumping (9),
            autotriggering (10),
            synchronizing (11),
```

```

        failed (12),
        running (13)
    }
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "This value represents the circuit's Network Management
    operational and service substate. NOTE: These values are
    incremented by one compared to the standard DECnet values
    in order to maintain compliance with RFC 1155."
 ::= { phivCircuitParametersEntry 4 }

phivCircuitCommonName OBJECT-TYPE
SYNTAX DisplayString ( SIZE (0..16) )
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The name of the circuit entry in the table, for example,
    SVA-0 or in a level 2 router ASYNC-8 or ETHER-1)."
 ::= { phivCircuitParametersEntry 5 }

phivCircuitExecRecallTimer OBJECT-TYPE
SYNTAX INTEGER (0..65535)
ACCESS read-write
STATUS mandatory
DESCRIPTION
    "This parameter represents the minimum number of
    seconds to wait before restarting the circuit. A
    value of 0 indicates not timer is running."
 ::= { phivCircuitParametersEntry 6 }

phivCircuitCommonType OBJECT-TYPE
SYNTAX INTEGER {
    ddcmp-point (1),
    ddcmp-control (2),
    ddcmp-tributary (3),
    x25 (4),
    ddcmp-dmc (5),
    ethernet (6),
    ci (7),
    qp2-dte20 (8),
    bisync (9),
    other (14),
    fddi (15)
}
ACCESS read-only
STATUS mandatory
DESCRIPTION

```

"Represents the type of the circuit. For X.25 circuits, the value must be set to X25. For DDCMP and Ethernet circuits it is read only and is the same value as the protocol of the associated line.
NOTE: Values 1 - 5 are incremented by one compared to the standard DECnet values in order to maintain compliance with RFC 1155."

```
::= { phivCircuitParametersEntry 7 }
```

```
phivCircuitService OBJECT-TYPE
```

```
SYNTAX INTEGER {
    enabled (1),
    disabled (2)
}
```

```
ACCESS read-write
```

```
STATUS mandatory
```

```
DESCRIPTION
```

"This value indicates whether or not Network Management allows service operations on a circuit. The values for service-control are as follows:

ENABLED SERVICE state and/or service functions are allowed.

DISABLED SERVICE state and/or service functions are not allowed.

NOTE: These values are incremented by one compared to the standard DECnet values in order to maintain compliance with RFC 1155."

```
::= { phivCircuitParametersEntry 8 }
```

```
phivCircuitExecCost OBJECT-TYPE
```

```
SYNTAX INTEGER (1..25)
```

```
ACCESS read-write
```

```
STATUS mandatory
```

```
DESCRIPTION
```

"This value represents the routing cost of the circuit. Routing sends messages along the path between two nodes having the smallest cost."

```
::= { phivCircuitParametersEntry 9 }
```

```
phivCircuitExecHelloTimer OBJECT-TYPE
```

```
SYNTAX INTEGER (1..8191)
```

```
ACCESS read-write
```

```
STATUS mandatory
```

```
DESCRIPTION
```

"This value determines the frequency of Routing Hello

```

    messages sent to the adjacent node on the circuit."
 ::= { phivCircuitParametersEntry 10 }

```

```
-- Circuit Counters Table
```

```

phivCircuitCountTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivCircuitCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about the counters associated with all
        circuits currently known."
 ::= { circuit 2 }

phivCircuitCountEntry OBJECT-TYPE
    SYNTAX PhivCircuitCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Counter information about all circuits currently known"
    INDEX      { phivCircuitIndex }
 ::= { phivCircuitCountTable 1 }

```

```

PhivCircuitCountEntry ::=
    SEQUENCE {
        phivCircuitCountSecLastZeroed
            PhivCounter (0..65535),
        phivCircuitCountTermPacketsRecd
            PhivCounter,
        phivCircuitCountOriginPackSent
            PhivCounter,
        phivCircuitCountTermCongLoss
            PhivCounter (0..65535),
        phivCircuitCountCorruptLoss
            PhivCounter (0..255),
        phivCircuitCountTransitPksRecd
            PhivCounter,
        phivCircuitCountTransitPkSent
            PhivCounter,
        phivCircuitCountTransitCongestLoss
            PhivCounter (0..65535),
        phivCircuitCountCircuitDown
            PhivCounter (0..255),
        phivCircuitCountInitFailure
            PhivCounter (0..255),
        phivCircuitCountAdjDown
            PhivCounter,
    }

```

```

    phivCircuitCountPeakAdj
        PhivCounter,
    phivCircuitCountBytesRecd
        PhivCounter,
    phivCircuitCountBytesSent
        PhivCounter,
    phivCircuitCountDataBlocksRecd
        PhivCounter (0..65535),
    phivCircuitCountDataBlocksSent
        PhivCounter,
    phivCircuitCountUsrBuffUnav
        PhivCounter (0..65535)
}
phivCircuitCountSecLastZeroed OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of seconds since the circuit counters for this
        circuit were last zeroed."
    ::= { phivCircuitCountEntry 1 }

phivCircuitCountTermPacketsRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of terminating packets received on this circuit."
    ::= { phivCircuitCountEntry 2 }

phivCircuitCountOriginPackSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of originating packets sent on this circuit."
    ::= { phivCircuitCountEntry 3 }

phivCircuitCountTermCongLoss OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of terminating congestion losses on this
        circuit."
    ::= { phivCircuitCountEntry 4 }

```

```
phivCircuitCountCorruptLoss OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of corruption losses on this circuit."
    ::= { phivCircuitCountEntry 5 }

phivCircuitCountTransitPksRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of Transit packets received on this circuit."
    ::= { phivCircuitCountEntry 6 }

phivCircuitCountTransitPkSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of transit packets sent on this circuit."
    ::= { phivCircuitCountEntry 7 }

phivCircuitCountTransitCongestLoss OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of transit congestion losses on this circuit."
    ::= { phivCircuitCountEntry 8 }

phivCircuitCountCircuitDown OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of circuit downs on this circuit."
    ::= { phivCircuitCountEntry 9 }

phivCircuitCountInitFailure OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of Initialization failures on this circuit."
    ::= { phivCircuitCountEntry 10 }
```

```
phivCircuitCountAdjDown OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This counter indicates the number of adjacency losses
        that result from any of the following:
        Node listener timeout
        Invalid data received at node listener
        Unexpected control (initialization or verification)
        message received
        Routing message received with a checksum error
        Node identification from a routing message or a
        Hello message that is not the one expected Hello
        message received indicating that connectivity
        became one-way
        Adjacency idled."
    ::= { phivCircuitCountEntry 11 }

phivCircuitCountPeakAdj OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This counter indicates the maximum number of nodes
        that are up on the circuit."
    ::= { phivCircuitCountEntry 12 }

phivCircuitCountBytesRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of bytes received on this circuit."
    ::= { phivCircuitCountEntry 13 }

phivCircuitCountBytesSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of bytes sent on this circuit."
    ::= { phivCircuitCountEntry 14 }

phivCircuitCountDataBlocksRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
```

```
DESCRIPTION
    "Number of data blocks received on this circuit."
 ::= { phivCircuitCountEntry 15 }

phivCircuitCountDataBlocksSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of data blocks sent on this circuit."
 ::= { phivCircuitCountEntry 16 }

phivCircuitCountUsrBuffUnav OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of user buffer unavailable errors."
 ::= { phivCircuitCountEntry 17 }

-- Additional Circuit Parameters

phivCircuitOrigQueueLimit OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This parameter indicates the maximum number of
         originating packets that may be outstanding on this
         circuit. This does not include route-thru traffic."
 ::= { circuit 3 }

phivCircuitCountZeroCount OBJECT-TYPE
    SYNTAX INTEGER {
        other (1),
        reset (2)
    }
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "When this value is set to 2, all of the counters in the
         Circuit Counter Table are set to zero."
 ::= { circuit 4 }

-- DDCMP Circuit Group

-- The implementation of the DDCMP Circuit Group is mandatory for
-- all systems which support DDCMP circuits.
```

```

-- DDCMP Parameters Table

phivDDCMPCircuitParametersTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivDDCMPCircuitParametersEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about DDCMP circuit parameters."
    ::= { ddcmp 1 }

phivDDCMPCircuitParametersEntry OBJECT-TYPE
    SYNTAX PhivDDCMPCircuitParametersEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Parameters information about DDCMP circuits currently
        known."
    INDEX      { phivDDCMPCircuitIndex }
    ::= { phivDDCMPCircuitParametersTable 1 }

PhivDDCMPCircuitParametersEntry ::=
    SEQUENCE {
        phivDDCMPCircuitIndex
            INTEGER,
        phivDDCMPCircuitAdjNodeAddr
            INTEGER (0..65535),
        phivDDCMPCircuitTributary
            INTEGER (0..255)
    }

phivDDCMPCircuitIndex OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A unique index value for each known DDCMP circuit.
        This is the same value as phivCircuitIndex."
    ::= { phivDDCMPCircuitParametersEntry 1 }

phivDDCMPCircuitAdjNodeAddr OBJECT-TYPE
    SYNTAX PhivAddr -- OCTET STRING (SIZE (2))
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The address of the adjacent node."
    ::= { phivDDCMPCircuitParametersEntry 2 }

```

```

phivDDCMPCircuitTributary OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value represents the Data Link physical tributary
        address of the circuit."
    ::= { phivDDCMPCircuitParametersEntry 3 }

-- DDCMP Circuit Counter Table

phivDDCMPCircuitCountTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivDDCMPCircuitCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about the DDCMP counters associated with all
        circuits currently known."
    ::= { ddcmp 2 }

phivDDCMPCircuitCountEntry OBJECT-TYPE
    SYNTAX PhivDDCMPCircuitCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Counter information about DDCMP circuits now known"
    INDEX      { phivCircuitIndex }
    ::= { phivDDCMPCircuitCountTable 1 }

PhivDDCMPCircuitCountEntry ::=
    SEQUENCE {
        phivDDCMPCircuitErrorsInbd
            PhivCounter (0..255),
        phivDDCMPCircuitErrorsOutbd
            PhivCounter (0..255),
        phivDDCMPCircuitRmteReplyTimeouts
            PhivCounter (0..255),
        phivDDCMPCircuitLocalReplyTimeouts
            PhivCounter (0..255),
        phivDDCMPCircuitRmteBuffErrors
            PhivCounter (0..255),
        phivDDCMPCircuitLocalBuffErrors
            PhivCounter (0..255),
        phivDDCMPCircuitSelectIntervalsElap
            PhivCounter (0..65535),
        phivDDCMPCircuitSelectTimeouts
            PhivCounter (0..255)
    }

```

```
phivDDCMPCircuitErrorsInbd OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of Data errors inbound."
    ::= { phivDDCMPCircuitCountEntry 1 }

phivDDCMPCircuitErrorsOutbd OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of outbound data errors."
    ::= { phivDDCMPCircuitCountEntry 2 }

phivDDCMPCircuitRmteReplyTimeouts OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of remote reply timeouts."
    ::= { phivDDCMPCircuitCountEntry 3 }

phivDDCMPCircuitLocalReplyTimeouts OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of local Reply timeouts."
    ::= { phivDDCMPCircuitCountEntry 4 }

phivDDCMPCircuitRmteBuffErrors OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of remote reply time out errors."
    ::= { phivDDCMPCircuitCountEntry 5 }

phivDDCMPCircuitLocalBuffErrors OBJECT-TYPE
    SYNTAX PhivCounter (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of local buffer errors."
    ::= { phivDDCMPCircuitCountEntry 6 }
```

```

phivDDCMPCircuitSelectIntervalsElap OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Selection intervals that have elapsed."
    ::= { phivDDCMPCircuitCountEntry 7 }

phivDDCMPCircuitSelectTimeouts OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of selection timeouts."
    ::= { phivDDCMPCircuitCountEntry 8 }

-- DDCMP Line Count Table

phivDDCMPLineCountTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivDDCMPLineCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "The DDCMP Line Count Table."
    ::= { ddcmp 3 }

phivDDCMPLineCountEntry OBJECT-TYPE
    SYNTAX PhivDDCMPLineCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "There is one entry in the table for each line."
    INDEX { phivDDCMPLineCountIndex }
    ::= { phivDDCMPLineCountTable 1 }

PhivDDCMPLineCountEntry ::=
    SEQUENCE {
        phivDDCMPLineCountIndex
            INTEGER,
        phivDDCMPLineCountDataErrsIn
            PhivCounter (0..255),
        phivDDCMPLineCountRmteStationErrs
            PhivCounter (0..255),
        phivDDCMPLineCountLocalStationErrs
            PhivCounter (0..255)
    }

```

```
phivDDCMPLineCountIndex OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The line on which this entry's equivalence is
        effective. The interface identified by a particular
        value of this index is the same interface as
        identified by the same value of phivLineIndex.
        This value is the IfIndex."
    ::= { phivDDCMPLineCountEntry 1 }

phivDDCMPLineCountDataErrsIn OBJECT-TYPE
    SYNTAX PhivCounter ( 0..255 )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of data errors inbound."
    ::= { phivDDCMPLineCountEntry 2 }

phivDDCMPLineCountRmteStationErrs OBJECT-TYPE
    SYNTAX PhivCounter ( 0..255 )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of remote station errors."
    ::= { phivDDCMPLineCountEntry 3 }

phivDDCMPLineCountLocalStationErrs OBJECT-TYPE
    SYNTAX PhivCounter ( 0..255 )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of local station errors."
    ::= { phivDDCMPLineCountEntry 4 }

-- DDCMP Multipoint Circuit Control Group

-- The implementation of the DDCMP Multipoint Circuit Control
-- Group is mandatory for all systems which support DDCMP
-- multipoint control circuits.

phivControlSchedTimer OBJECT-TYPE
    SYNTAX INTEGER (50..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value represents the number of milliseconds
```

between recalculation of tributary polling priorities."
 DEFVAL { 200 }
 ::= { control 1 }

phivControlDeadTimer OBJECT-TYPE

SYNTAX INTEGER (1..65535)
 ACCESS read-only
 STATUS mandatory
 DESCRIPTION
 "This value represents the number of milliseconds
 between polls of one of the set of dead
 tributaries."
 DEFVAL { 10000 }
 ::= { control 2 }

phivControlDelayTimer OBJECT-TYPE

SYNTAX INTEGER (1..65535)
 ACCESS read-only
 STATUS mandatory
 DESCRIPTION
 "This value represents the minimum number of
 milliseconds to delay between polls. The delay timer
 limits the effect of a very fast control station on
 slow tributaries."
 ::= { control 3 }

phivControlStreamTimer OBJECT-TYPE

SYNTAX INTEGER (0..65535)
 ACCESS read-only
 STATUS mandatory
 DESCRIPTION
 "This value represents the number of milliseconds a
 tributary or a half duplex remote station is
 allowed to hold the line."
 NOTE: This parameter can also be applied to
 half-duplex lines of type DDCMP POINT."
 DEFVAL { 6000 }
 ::= { control 4 }

-- DDCMP Multipoint Circuit Control Parameters Table

phivControlParametersTable OBJECT-TYPE

SYNTAX SEQUENCE OF PhivControlParametersEntry
 ACCESS not-accessible
 STATUS mandatory
 DESCRIPTION
 "Information about control circuit parameters."

```
 ::= { control 5 }
```

```
phivControlParametersEntry OBJECT-TYPE
  SYNTAX PhivControlParametersEntry
  ACCESS not-accessible
  STATUS mandatory
  DESCRIPTION
    "Parameters information about control circuits
     currently known."
  INDEX { phivControlCircuitIndex }
  ::= { phivControlParametersTable 1 }
```

```
PhivControlParametersEntry ::=
  SEQUENCE {
    phivControlCircuitIndex
      INTEGER,
    phivControlBabbleTimer
      INTEGER (1..65535),
    phivControlMaxBufs
      INTEGER (0..254),
    phivControlMaxTransmits
      INTEGER (1..255),
    phivControlDyingBase
      INTEGER (0..255),
    phivControlDyingIncrement
      INTEGER (0..255),
    phivControlDeadThreshold
      INTEGER (0..255),
    phivControlDyingThreshold
      INTEGER (0..255),
    phivControlInactTreshold
      INTEGER (0..255),
    phivControlPollingState
      INTEGER,
    phivControlPollingSubState
      INTEGER,
    phivControlTransTimer
      INTEGER (0..65535)
  }
```

```
phivControlCircuitIndex OBJECT-TYPE
  SYNTAX INTEGER
  ACCESS read-only
  STATUS mandatory
  DESCRIPTION
    "A unique index value for each known multirpoint
     control circuit.
     This is the same value as phivCircuitIndex."
  ::= { phivControlParametersEntry 1 }
```

```
phivControlBabbleTimer OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the number of milliseconds that a
        selected tributary or remote half-duplex station is
        allowed to transmit."
    DEFVAL { 6000 }
    ::= { phivControlParametersEntry 2 }

phivControlMaxBufs OBJECT-TYPE
    SYNTAX INTEGER (0..254)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum number of buffers the
        tributary can use from a common buffer pool. If not
        set, there is no common buffer pool and buffers are
        explicitly supplied by the higher level. Count is a
        decimal integer in the range 1-254."
    ::= { phivControlParametersEntry 3 }

phivControlMaxTransmits OBJECT-TYPE
    SYNTAX INTEGER (1..255)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the maximum number of data
        messages that can be transmitted at one time. Count
        is a decimal integer in the range 1-255."
    DEFVAL { 4 }
    ::= { phivControlParametersEntry 4 }

phivControlDyingBase OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the base priority to which a
        tributary is reset each time it has been polled. A
        separate base can be set for each of the indicated
        polling states. Base is a decimal integer in the range
        0-255. If not set, the defaults are: active, 255;
        inactive, 0; and dying, 0."
    ::= { phivControlParametersEntry 5 }
```

```
phivControlDyingIncrement OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the increment added to the
        tributary priority each time the scheduling timer
        expires.  If not set, the defaults are: active, 0;
        inactive, 64; and dying, 16."
    ::= { phivControlParametersEntry 6 }

phivControlDeadThreshold OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the number of times to poll the
        active, inactive, or dying tributary before changing
        its polling state to dead because of receive timeouts.
        Count is a decimal integer in the range 0-255."
    DEFVAL { 8 }
    ::= { phivControlParametersEntry 7 }

phivControlDyingThreshold OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the number of times to poll the
        active or inactive tributary before changing its
        polling state to dying because of receive timeouts.
        Count is a decimal integer in the range 0-255."
    DEFVAL { 2 }
    ::= { phivControlParametersEntry 8 }

phivControlInactTreshold OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the number of times to poll the
        active tributary before changing its polling state to
        inactive because of no data response. Count is a
        decimal integer in the range
        0-255."
    DEFVAL { 8 }
    ::= { phivControlParametersEntry 9 }
```

phivControlPollingState OBJECT-TYPE

```
SYNTAX INTEGER {
    automatic (1),
    active (2),
    inactive (3),
    dying (4),
    dead (5)
}
```

ACCESS read-write

STATUS mandatory

DESCRIPTION

"This value represents the state of the tributary relative to the multipoint polling algorithm. If not set the default is AUTOMATIC. The possible states are:

AUTOMATIC

The tributary's state is allowed to vary according to the operation of the polling algorithm.

ACTIVE/INACTIVE/DYING/DEAD

The tributary is locked in the specified state.

NOTE: These values are incremented by one compared to the standard DECnet values in order to maintain compliance with RFC 1155."

```
::= { phivControlParametersEntry 10 }
```

phivControlPollingSubState OBJECT-TYPE

```
SYNTAX INTEGER {
    active (1),
    inactive (2),
    dying (3),
    dead (4)
}
```

ACCESS read-only

STATUS mandatory

DESCRIPTION

"This value represents the tributary's state as determined by the polling algorithm. This applies only when the polling state is AUTOMATIC and is read-only to Network Management. Polling-substate is one of ACTIVE, INACTIVE, DYING, or DEAD. It is displayed as a tag on the polling state, for example: AUTOMATIC-INACTIVE."

```
::= { phivControlParametersEntry 11 }
```

```

phivControlTransTimer OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "This value represents the number of milliseconds to
        delay between data message transmits. Milliseconds is
        a decimal integer in the range 0-65535."
    DEFVAL { 0 }
    ::= { phivControlParametersEntry 12 }

-- Ethernet Group

-- The implementation of the Ethernet Group is mandatory
-- for all systems which support ethernet links.

-- Ethernet Parameters Table

phivEthLinkParametersTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivEthLinkParametersEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about ethernet link parameters."
    ::= { ethernet 1 }

phivEthLinkParametersEntry OBJECT-TYPE
    SYNTAX PhivEthLinkParametersEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Parameter information about ethernet links currently
        known."
    INDEX      { phivEthLinkIndex }
    ::= { phivEthLinkParametersTable 1 }

PhivEthLinkParametersEntry ::=
    SEQUENCE {
        phivEthLinkIndex
            INTEGER,
        phivEthDesigRouterNodeAddr
            PhivAddr,
        phivEthMaxRouters
            INTEGER (0..255),
        phivEthRouterPri
            INTEGER (0..127),
        phivEthHardwareAddr
            OCTET STRING
    }

```

```
    }
    phivEthLinkIndex OBJECT-TYPE
        SYNTAX INTEGER
        ACCESS read-only
        STATUS mandatory
        DESCRIPTION
            "The circuit over which this links information is
            collected. This is the same as phivCircuitIndex."
        ::= { phivEthLinkParametersEntry 1 }

    phivEthDesigRouterNodeAddr OBJECT-TYPE
        SYNTAX PhivAddr -- OCTET STRING (SIZE (2))
        ACCESS read-only
        STATUS mandatory
        DESCRIPTION
            "This value is the address of the designated router."
        ::= { phivEthLinkParametersEntry 2 }

    phivEthMaxRouters OBJECT-TYPE
        SYNTAX INTEGER (0..255)
        ACCESS read-write
        STATUS mandatory
        DESCRIPTION
            "This parameter is the maximum number of routers (other
            than the executor itself) allowed on the circuit by
            Routing for circuits that are owned by the executor
            node."
        ::= { phivEthLinkParametersEntry 3 }

    phivEthRouterPri OBJECT-TYPE
        SYNTAX INTEGER (0..127)
        ACCESS read-write
        STATUS mandatory
        DESCRIPTION
            "This parameter is the priority that this router is to
            have in the selection of designated router for the
            circuit on circuits that are owned by the executor
            node."
        DEFVAL { 64 }
        ::= { phivEthLinkParametersEntry 4 }

    phivEthHardwareAddr OBJECT-TYPE
        SYNTAX OCTET STRING ( SIZE (6) )
        ACCESS read-only
        STATUS mandatory
        DESCRIPTION
            "This read-only parameter is the address that is
            associated with the line device hardware as seen by
```

```

        the DECnet Software.  This value is not the same as
        ifPhysAddress."
 ::= { phivEthLinkParametersEntry 5 }

-- Counters Group

-- The implementation of the Counters Group is mandatory for
-- systems which only support DECnet style locking counters.

-- Counters Table

phivCountersCountTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivCountersCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Information about ethernet link counters."
    ::= { counters 1 }

phivCountersCountEntry OBJECT-TYPE
    SYNTAX PhivCountersCountEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Counter information about ethernet links currently
        known.."
    INDEX      { phivCountersIndex }
    ::= { phivCountersCountTable 1 }

PhivCountersCountEntry ::=
    SEQUENCE {
        phivCountersIndex
            INTEGER,
        phivCountersCountBytesRecd
            PhivCounter,
        phivCountersCountBytesSent
            PhivCounter,
        phivCountersCountDataBlocksRecd
            PhivCounter,
        phivCountersCountDataBlocksSent
            PhivCounter,
        phivCountersCountEthUsrBuffUnav
            PhivCounter (0..65535),
        phivCountersCountMcastBytesRecd
            PhivCounter,
        phivCountersCountDataBlksRecd
            PhivCounter,
        phivCountersCountDataBlksSent
    }

```

```

        PhivCounter,
    phivCountersCountMcastBlksRecd
        PhivCounter,
    phivCountersCountBlksSentDef
        PhivCounter,
    phivCountersCountBlksSentSingleCol
        PhivCounter,
    phivCountersCountBlksSentMultCol
        PhivCounter,
    phivCountersCountSendFailure
        PhivCounter,
    phivCountersCountCollDetectFailure
        PhivCounter (0..65535),
    phivCountersCountReceiveFailure
        PhivCounter (0..65535),
    phivCountersCountUnrecFrameDest
        PhivCounter (0..65535),
    phivCountersCountDataOver
        PhivCounter (0..65535),
    phivCountersCountSysBuffUnav
        PhivCounter (0..65535),
    phivCountersCountUsrBuffUnav
        PhivCounter (0..65535)
    }
phivCountersIndex OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The interface to which these counters apply. This is
        the same interface as identified by the same value of
        phivLineIndex. This value is the IfIndex."
    ::= { phivCountersCountEntry 1 }

phivCountersCountBytesRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of bytes received over this link."
    ::= { phivCountersCountEntry 2 }

phivCountersCountBytesSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of bytes sent over this link."

```

```
 ::= { phivCountersCountEntry 3 }

phivCountersCountDataBlocksRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of data blocks received over this link."
    ::= { phivCountersCountEntry 4 }

phivCountersCountDataBlocksSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of data blocks sent over this link."
    ::= { phivCountersCountEntry 5 }

phivCountersCountEthUsrBuffUnav OBJECT-TYPE
    SYNTAX PhivCounter (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of user buffer unavailable errors over this
        link."
    ::= { phivCountersCountEntry 6 }

phivCountersCountMcastBytesRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of multicast bytes received over this link."
    ::= { phivCountersCountEntry 7 }

phivCountersCountDataBlksRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of data blocks received over this link."
    ::= { phivCountersCountEntry 8 }

phivCountersCountDataBlksSent OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
```

```
        "Number of data blocks sent over this link."
 ::= { phivCountersCountEntry 9 }

phivCountersCountMcastBlksRecd OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of multicast blocks received over this link."
 ::= { phivCountersCountEntry 10 }

phivCountersCountBlksSentDef OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of blocks sent, initially deferred over this
 link."
 ::= { phivCountersCountEntry 11 }

phivCountersCountBlksSentSingleCol OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of blocks sent, single collision over this link."
 ::= { phivCountersCountEntry 12 }

phivCountersCountBlksSentMultCol OBJECT-TYPE
    SYNTAX PhivCounter
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of blocks sent, multiple collisions over this
 link."
 ::= { phivCountersCountEntry 13 }

phivCountersCountSendFailure OBJECT-TYPE
    SYNTAX INTEGER ( 0..65535 )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "Number of send failures over this link."
 ::= { phivCountersCountEntry 14 }

phivCountersCountCollDetectFailure OBJECT-TYPE
    SYNTAX INTEGER ( 0..65535 )
    ACCESS read-only
```

```
STATUS mandatory
DESCRIPTION
    "Number of collision detect check failures over this
    link."
 ::= { phivCountersCountEntry 15 }

phivCountersCountReceiveFailure OBJECT-TYPE
SYNTAX INTEGER ( 0..65535 )
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "Number of receive failures over this link."
 ::= { phivCountersCountEntry 16 }

phivCountersCountUnrecFrameDest OBJECT-TYPE
SYNTAX INTEGER ( 0..65535 )
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "Number of unrecognized frame destinations over this
    link."
 ::= { phivCountersCountEntry 17 }

phivCountersCountDataOver OBJECT-TYPE
SYNTAX INTEGER ( 0..65535 )
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "Number of data overruns over this link."
 ::= { phivCountersCountEntry 18 }

phivCountersCountSysBuffUnav OBJECT-TYPE
SYNTAX INTEGER ( 0..65535 )
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "Number of system buffer unavailables over this link."
 ::= { phivCountersCountEntry 19 }

phivCountersCountUsrBuffUnav OBJECT-TYPE
SYNTAX INTEGER ( 0..65535 )
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "Number of user buffer unavailables."
 ::= { phivCountersCountEntry 20 }
```

```
-- Adjacency Group

-- The implementation of the Adjacency Group is mandatory for all
-- conformant implementations of this memo.

phivAdjTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivAdjEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "The Adjacency Table."
    ::= { adjacency 1 }

phivAdjEntry OBJECT-TYPE
    SYNTAX PhivAdjEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "There is one entry in the table for each adjacency."
    INDEX { phivAdjCircuitIndex }
    ::= { phivAdjTable 1 }

PhivAdjEntry ::=
    SEQUENCE {
        phivAdjCircuitIndex
            INTEGER,
        phivAdjNodeAddr
            PhivAddr,
        phivAdjBlockSize
            INTEGER,
        phivAdjListenTimer
            INTEGER (1..65535),
        phivAdjCircuitEtherServPhysAddr
            OCTET STRING,
        phivAdjType
            INTEGER,
        phivAdjState
            INTEGER,
        phivAdjPriority
            INTEGER,
        phivAdjExecListenTimer
            INTEGER (1..65535)
    }

phivAdjCircuitIndex OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
```

```
DESCRIPTION
    "A unique index value for each known circuit."
 ::= { phivAdjEntry 1 }

phivAdjNodeAddr OBJECT-TYPE
    SYNTAX PhivAddr -- OCTET STRING (SIZE (2))
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The address of the adjacent node."
 ::= { phivAdjEntry 2 }

phivAdjBlockSize OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This read-only parameter is the block size that was
        negotiated with the adjacent Routing layer during Routing
        initialization over a particular circuit. It includes the
        routing header, but excludes the data link header. This
        parameter is qualified by ADJACENT NODE."
 ::= { phivAdjEntry 3 }

phivAdjListenTimer OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value determines the maximum number of seconds
        allowed to elapse before Routing receives some message
        (either a Hello message or a user message) from the
        adjacent node on the circuit. It was agreed during
        Routing initialization with the adjacent Routing layer.
        This parameter is qualified by ADJACENT NODE."
 ::= { phivAdjEntry 4 }

phivAdjCircuitEtherServPhysAddr OBJECT-TYPE
    SYNTAX OCTET STRING ( SIZE (6) )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This parameter indicates the Ethernet physical address
        of an adjacent node that is being serviced on this
        circuit. This parameter is a qualifier for SERVICE
        SUBSTATE."
 ::= { phivAdjEntry 5 }
```

```

phivAdjType OBJECT-TYPE
  SYNTAX INTEGER {
    routing-III (1),
    nonrouting-III (2),
    area (3),
    routing-IV (4),
    nonrouting-IV (5)
  }
  ACCESS read-only
  STATUS mandatory
  DESCRIPTION
    "This parameter indicates the type of adjacency.

    For adjacent nodes, this is a read-only parameter that
    indicates the type of the reachable adjacent node.
    NOTE: The routing-III and nonrouting-III values are
    incremented by one compared to the standard DECnet
    values in order to maintain compliance with RFC 1155)"
 ::= { phivAdjEntry 6 }

phivAdjState OBJECT-TYPE
  SYNTAX INTEGER {
    initializing (1),           -- Ethernet one-way
    up (2),                   -- Ethernet two-way
    run (3),                   -- The eight DDCMP/X.25 states
    circuit-rejected (4),
    data-link-start (5),
    routing-layer-initialize (6),
    routing-layer-verify (7),
    routing-layer-complete (8),
    off (9),
    halt (10)
  }
  ACCESS read-only
  STATUS mandatory
  DESCRIPTION
    "This value indicates the state of a router adjacency.
    On adjacencies over a circuit of type
    (phivCircuitCommonType) Ethernet, CI, or FDDI, with an
    adjacent node of type (phivAdjType) ROUTING IV or AREA,
    this variable is the state of the Ethernet
    Initialization Layer for this adjacency, and can have
    values INITIALIZING or UP. (See Section 9.1.1 of
    DECnet Phase IV Routing Layer Functional Specification.)

    On adjacencies over a circuit of type
    (phivCircuitCommonType) Ethernet, CI, or FDDI, with an
    adjacent node of type (phivAdjType) NONROUTING IV,

```

this variable will always take on the value UP.

On adjacencies over a circuit of type
(phivCircuitCommonType) DDCMP POINT, DDCMP CONTROL,
DDCMP TRIBUTARY, DDCMP DMC, or X.25, this variable is
the state of the Routing Layer Initialization Circuit
State. (See section 7.3, *ibid.*) It can have values
between RUN and HALT.

On adjacencies over a circuit of type
(phivCircuitCommonType) OTHER, this variable may be
used in a manner consistent with the Initialization
Layer used on that circuit."

```
::= { phivAdjEntry 7 }
```

```
phivAdjPriority OBJECT-TYPE
```

```
SYNTAX INTEGER (0..255)
```

```
ACCESS read-only
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"Priority assigned by the adjacent node for this  
circuit."
```

```
::= { phivAdjEntry 8 }
```

```
phivAdjExecListenTimer OBJECT-TYPE
```

```
SYNTAX INTEGER (1..65535)
```

```
ACCESS read-only
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"This read-only value determines the maximum number of  
seconds allowed to elapse before Routing receives some  
message (either a Hello message or a user message) from  
the adjacent node on the circuit. It was agreed during  
Routing initialization with the adjacent Routing layer."
```

```
::= { phivAdjEntry 9 }
```

```
-- Line Group
```

```
-- The implementation of the Line Group is mandatory for all
```

```
-- conformant implementations of this memo.
```

```
phivLineTable OBJECT-TYPE
```

```
SYNTAX SEQUENCE OF PhivLineEntry
```

```
ACCESS not-accessible
```

```
STATUS mandatory
```

```
DESCRIPTION
```

```
"The Line Table."
```

```
::= { line 1 }
```

```

phivLineEntry OBJECT-TYPE
    SYNTAX PhivLineEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "There is one entry in the table for each line."
    INDEX { phivLineIndex }
    ::= { phivLineTable 1 }

PhivLineEntry ::=
    SEQUENCE {
        phivLineIndex
            INTEGER,
        phivLineName
            DisplayString,
        phivLineState
            INTEGER,
        phivLineSubstate
            INTEGER,
        phivLineService
            INTEGER,
        phivLineDevice
            DisplayString,
        phivLineReceiveBufs
            INTEGER (0..65535),
        phivLineProtocol
            INTEGER,
        phivLineServiceTimer
            INTEGER (1..65535),
        phivLineMaxBlock
            INTEGER (1..65535)
    }

phivLineIndex OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The line on which this entry's equivalence is effective.
        This is the same as the IfIndex."
    ::= { phivLineEntry 1 }

phivLineName OBJECT-TYPE
    SYNTAX DisplayString ( SIZE (0..16) )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION

```

"The name of the line on this row of the table."
 ::= { phivLineEntry 2 }

phivLineState OBJECT-TYPE

SYNTAX INTEGER {
 on (1),
 off (2),
 service (3),
 cleared (4)

}

ACCESS read-only

STATUS mandatory

DESCRIPTION

"This value represents Network Management operational state.

NOTE that these values are incremented by one compared to the standard DECnet values."

::= { phivLineEntry 3 }

phivLineSubstate OBJECT-TYPE

SYNTAX INTEGER {
 starting (1),
 reflecting (2),
 looping (3),
 loading (4),
 dumping (5),
 triggering (6),
 auto-service (7),
 auto-loading (8),
 auto-dumping (9),
 auto-triggering (10),
 synchronizing (11),
 failed (12),
 running (13)

}

ACCESS read-only

STATUS mandatory

DESCRIPTION

"This value represents the line's read-only Network Management substate.

NOTE that these values are incremented by one compared to the standard DECnet values."

::= { phivLineEntry 4 }

phivLineService OBJECT-TYPE

SYNTAX INTEGER {
 starting (1),
 reflecting (2),

```

        looping (3),
        other (4)
    }
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "This value represents the line's read-only Network
    Management service.
    NOTE that these values are incremented by one compared to
    the standard DECnet values and OTHER is a new addition."
 ::= { phivLineEntry 5 }

phivLineDevice OBJECT-TYPE
    SYNTAX DisplayString ( SIZE (0..16) )
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value represents the Physical Link device to be
        used on the line."
    ::= { phivLineEntry 6 }

phivLineReceiveBufs OBJECT-TYPE
    SYNTAX INTEGER (0..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value represents the number of receive buffers
        reserved for the line. It is a decimal number in
        the range 0-65535. 0 is supported for those vendors
        that do not reserve buffers on a per line basis and
        use a pool of buffers that can be used by any line."
    ::= { phivLineEntry 7 }

phivLineProtocol OBJECT-TYPE
    SYNTAX INTEGER {
        ddcmp-point (1),
        ddcmp-control (2),
        ddcmp-tributary (3),
        reserved (4),
        ddcmp-dmc (5),
        lapb (6),
        ethernet (7),
        ci (8),
        qp2 (9),
        other (14),
        fddi (15)
    }
    ACCESS read-only

```

```
STATUS mandatory
DESCRIPTION
    "This value represents the protocol used on the line
    device. Note that these values are incremented by
    one compared to the standard DECnet values."
 ::= { phivLineEntry 8 }

phivLineServiceTimer OBJECT-TYPE
SYNTAX INTEGER (1..65535)
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "This value represents the amount of time in
    milliseconds allowed to elapse before a Data Link
    receive request completes while doing service
    operations."
 ::= { phivLineEntry 9 }

phivLineMaxBlock OBJECT-TYPE
SYNTAX INTEGER (1..65535)
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "This value represents the Data Link maximum block
    size on the line."
 ::= { phivLineEntry 10 }

-- Non Broadcast Line Group

-- The implementation of the Non Broadcast Line Group is
-- mandatory for all systems which implement non broadcast
-- lines.

phivNonBroadcastTable OBJECT-TYPE
SYNTAX SEQUENCE OF PhivNonBroadcastEntry
ACCESS not-accessible
STATUS mandatory
DESCRIPTION
    "The Non Broadcast Table."
 ::= { nonBroadcastLine 1 }

phivNonBroadcastEntry OBJECT-TYPE
SYNTAX PhivNonBroadcastEntry
ACCESS not-accessible
STATUS mandatory
DESCRIPTION
    "There is one entry in the table for each
    Non Broadcast line."
```

```
INDEX { phivNonBroadcastIndex }
 ::= { phivNonBroadcastTable 1 }
```

```
PhivNonBroadcastEntry ::=
SEQUENCE {
    phivNonBroadcastIndex
        INTEGER,
    phivNonBroadcastController
        INTEGER,
    phivNonBroadcastDuplex
        INTEGER,
    phivNonBroadcastClock
        INTEGER,
    phivNonBroadcastRetransmitTimer
        INTEGER (1..65535)
}
```

```
phivNonBroadcastIndex OBJECT-TYPE
SYNTAX INTEGER
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The Non Broadcast line on which this entry's
    equivalence is effective. This is the same value
    as the IfIndex."
 ::= { phivNonBroadcastEntry 1 }
```

```
phivNonBroadcastController OBJECT-TYPE
SYNTAX INTEGER {
    normal (1),
    loopback (2),
    other (3)
}
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "This value represents the Physical Link hardware
    controller mode for the line device. The values
    for controller-mode are:

    NORMAL For normal controller operating mode.

    LOOPBACK For software controllable loopback of the
    controller. On those devices that can support this
    mode, it causes all transmitted messages to be looped
    back from within the controller itself. This is
    accomplished without any manual intervention other
    than the setting of this parameter value.
```

OTHER indicates function is not supported
Note that these values are incremented by one compared to
the standard DECnet values."
 ::= { phivNonBroadcastEntry 2 }

phivNonBroadcastDuplex OBJECT-TYPE

SYNTAX INTEGER {
 full (1),
 half (2)
}

ACCESS read-only

STATUS mandatory

DESCRIPTION

"This value represents the Physical Link hardware
duplex mode of the line device. The possible modes
are:

FULL Full-duplex
HALF Half-duplex

Note that these values are incremented by one compared to
the standard DECnet values."

::= { phivNonBroadcastEntry 3 }

phivNonBroadcastClock OBJECT-TYPE

SYNTAX INTEGER {
 external (1),
 internal (2),
 other (3)
}

ACCESS read-only

STATUS mandatory

DESCRIPTION

"This value represents the Physical Link hardware clock
mode for the line device. The values for clock-mode are:

INTERNAL For software controllable loopback use of
the clock. On those devices that can support this
mode, it causes the device to supply a clock signal
such that a transmitted messages can be looped
back from outside the device. This may require manual
intervention other than the setting of this parameter
value. For example, the operator may have to connect
a loopback plug in place of the normal line.

EXTERNAL For normal clock operating mode, where the
clock signal is supplied externally to the controller.
Note that these values are incremented by one compared to

```
        the standard DECnet values."
 ::= { phivNonBroadcastEntry 4 }

phivNonBroadcastRetransmitTimer OBJECT-TYPE
    SYNTAX INTEGER (1..65535)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value represents number of milliseconds before
         the Data Link retransmits a block on the line. On
         half-duplex lines, this parameter is the select timer."
    DEFVAL { 3000 }
    ::= { phivNonBroadcastEntry 5 }

-- Area Parameters Group

-- The implementation of the Area Parameters Group is mandatory
-- for all systems which implement level 2 routing.

phivAreaTable OBJECT-TYPE
    SYNTAX SEQUENCE OF PhivAreaEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "Table of information kept on all areas known to
         this unit."
    ::= { area 1 }

phivAreaEntry OBJECT-TYPE
    SYNTAX PhivAreaEntry
    ACCESS not-accessible
    STATUS mandatory
    DESCRIPTION
        "The area routing information."
    INDEX { phivAreaNum }
    ::= { phivAreaTable 1 }

PhivAreaEntry ::=
    SEQUENCE {
        phivAreaNum
            INTEGER,
        phivAreaState
            INTEGER,
        phivAreaCost
            Gauge,
        phivAreaHops
            INTEGER,
        phivAreaNextNode
```

```
        PhivAddr,
        phivAreaCircuitIndex
        INTEGER
    }
phivAreaNum OBJECT-TYPE
    SYNTAX INTEGER (0..64)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value indicates the area number of this entry."
    ::= { phivAreaEntry 1 }

phivAreaState OBJECT-TYPE
    SYNTAX INTEGER {
        reachable (4),
        unreachable (5)
    }
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "This value indicates the state of the area"
    ::= { phivAreaEntry 2 }

phivAreaCost OBJECT-TYPE
    SYNTAX Gauge
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The total cost over the current path to the
        destination area. Cost is a value associated with
        using a circuit. Routing routes messages (data)
        along the path between 2 areas with the smallest
        cost."
    ::= { phivAreaEntry 3 }

phivAreaHops OBJECT-TYPE
    SYNTAX INTEGER (0..255)
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The number of hops to a destination area. A hop is
        the routing value representing the logical distance
        between two areas in network."
    ::= { phivAreaEntry 4 }

phivAreaNextNode OBJECT-TYPE
    SYNTAX PhivAddr
    ACCESS read-only
```

STATUS mandatory
DESCRIPTION
 "The next node on the circuit used to get to the
 area under scrutiny."
 ::= { phivAreaEntry 5 }

phivAreaCircuitIndex OBJECT-TYPE
SYNTAX INTEGER
ACCESS read-only
STATUS mandatory
DESCRIPTION
 "A unique index value for each known circuit."
 ::= { phivAreaEntry 6 }

-- Additional Area Parameters

phivAreaMaxCost OBJECT-TYPE
SYNTAX INTEGER (1..1022)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 "This value represents the maximum total path cost
 allowed from the executor to any other level 2 routing
 node. The AREA MAXIMUM COST number is decimal in the
 range 1-1022. This parameter is only applicable if
 the executor node is of type AREA."
 ::= { area 2 }

phivAreaMaxHops OBJECT-TYPE
SYNTAX INTEGER (1..30)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 "This value represents the maximum number of routing hops
 allowable from the executor to any other level 2
 routing node. This parameter is only applicable if the
 executor node is of type AREA."
 ::= { area 3 }

phivRouteMaxArea OBJECT-TYPE
SYNTAX INTEGER (1..63)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 "This value represents the largest area number and,
 therefore, number of areas that can be known about
 by the executor node's Routing. This parameter is only
 applicable if the executor node is of type AREA."

```
::= { area 4 }
```

```
END
```

5. Acknowledgements

This document is the result of work undertaken the by DECnet Phase IV MIB working group. In addition, the special contributions and comments of the following members are also acknowledged:

Chris Chiotasso, Sparticus
Steven Hunter, National Energy Research Supercomputer Center,
Lawrence Livermore National Laboratory

6. References

Cerf, V., "IAB Recommendations for the Development of Internet Network Management Standards", RFC 1052, NRI, April 1988.

Rose M., and K. McCloghrie, "Structure and Identification of Management Information for TCP/IP-based internets", RFC 1155, Performance Systems International, Hughes LAN Systems, May 1990.

McCloghrie K., and M. Rose, "Management Information Base for Network Management of TCP/IP-based internets", RFC 1156, Hughes LAN Systems, Performance Systems International, May 1990.

Case, J., Fedor, M., Schoffstall, M., and J. Davin, "Simple Network Management Protocol", RFC 1157, SNMP Research, Performance Systems International, Performance Systems International, MIT Laboratory for Computer Science, May 1990.

McCloghrie K., and M. Rose, Editors, "Management Information Base for Network Management of TCP/IP-based internets", RFC 1213, Performance Systems International, March 1991.

Rose, M., and K. McCloghrie, Editors, "Concise MIB Definitions", RFC 1212, Performance Systems International, Hughes LAN Systems, March 1991.

Cook, J., Editor, "Definitions of Managed Objects for the Ethernet-like Interface Types", RFC 1284, Chipcom Corporation, December 1991.

Digital Equipment Corporation, "DECnet-ULTRIX NCP Command Reference", Digital Equipment Corporation, Maynard, Massachusetts.

Digital Equipment Corporation, "DECnet-ULTRIX USE Guide", Digital Equipment Corporation, Maynard, Massachusetts.

Digital Equipment Corporation, "DECnet DIGITAL Network Architecture, Network Management Functional Specification", Version 4.0.0. Digital Equipment Corporation, Maynard, Massachusetts, July 1983.

Digital Equipment Corporation, "DECnet DIGITAL Network Architecture, Routing Layer Functional Specification", Version 2.0.0. Digital Equipment Corporation, Maynard, Massachusetts, May 1983.

Security Considerations

Security issues are not discussed in this memo.

Author's Address

Jon Saperia
Digital Equipment Corporation
40 Old Bolton Road
Stow, Massachusetts 01775-1215

Phone: 508-496-8333

EMail: saperia@enet.dec.com